

## How do I create short codes in PATGuard 3?

PATGuard 3 short codes save time when entering information while PAT testing. It enables a code of up to three characters to be set which can represent regularly typed text. There is no limit to the number of short codes that can be set.

Short codes

1. In PATGuard 3, select Setup ->PAT Options to open the Options dialog box.

2. The lower half of the 'PAT Options' box below is used to enter your short code information.

Company Details	User Accounts PAT C	ptions Asset 0	àroups
Tester Output			
Text Line 1:	Notes -	Text Line 3:	Notes -
Text Line 2:	Notes -	Text Line 4:	Notes 👻
Use code ab	breviations on tester	Show codes fo	r: Asset Description 💌
Code		Represents	
Hint: Save typing	g on the TESTER by ente eviations here but DO NO	ering abbreviation	

3. Click the 'Use code abbreviations on tester' check box, a tick will appear.

4. Use the 'Show codes for' drop down menu and select the appropriate field, e.g. Asset Description.

5. Click the 'Add' button add a new row to the table.

6. Enter a code up to three characters in the Code field.

7. Enter the text that the code represents in the Represents field.

Note: A third column to enter a cost for 'Repair' codes is also provided

Note: Other short codes for other Asset Details fields, such as Make or Model etc, can also be entered before saving the settings with the OK button.

Company Details User Accounts PAT Op	otions Asset Groups		
Tester Output			
Text Line 1: Asset Description 💌	Text Line 3:	Make	•
Text Line 2: Asset Group	Text Line 4:	Model	•
Use code abbreviations on tester	Show codes for	Asset Description	•
Code	Represents		-
101	Computer 2 Monitor		
102			
103	IEC Lead		
104	Printer		•
Hint: Save typing on the TESTER by enter Setup your abbreviations here but DO NOT	include the 9 in		

Note: When entering codes at the instrument, the 3 digit short code MUST be prefixed by a number 9. This is so that PATGuard 3 will recognise the value as a Short Code.

8. Asset Groups

etup	X
Company Details User Accounts PAT Options Asset Groups	
Type of Premises: Construction sites 110V equipment	•
Construction Hand-held Equipment (Class I) Construction IT Equipment (Class I) Construction IT Equipment (Class I) Construction Movable Equipment (Class I) Construction Movable Equipment (Class I) Construction Portable Equipment (Class I) Construction Portable Equipment (Class I) Construction Stationary Equipment (Class I) Construction Stationary Equipment (Class I)	
Add Edit	Delete
OK Cancel	Apply

Assets can be grouped together where they share a common re-test period and perhaps test code.

In the UK, the Health and Safety Executive (HSE) and the Institute of Electrical Engineers (IEE) define re-test periods in their documentation.

These re-test periods are defined in terms of the type of premises where the Assets are located, the type of equipment, type of test (formal visual or combined inspection and test) and the class of the equipment (class I or class II). These values are already set into the program. The Edit and Add actions allow you to make changes to these values.

Other Asset groups which are not premise dependent can be added to Undefined (e.g. Imported Asset Groups or equivalent from another database will be in Undefined).

If you require more help, please contact us at https://www.seaward.com/gb/enquire/.