



**SEAWARD**  
ELECTRICAL SAFETY TESTING  
& MEASURING.

## How can I test a RCD with the PrimeTest 250+?

To test an RCD plug or an RCD on an extension lead, you need to plug the RCD plug into the RCD isolator box (NTB 1) and then connect the PT250 mains lead into the either the socket on the RCD plug or the last socket on the extension lead.

If you require more help, please contact us at <https://www.seaward.com/sitemap/enquire/>.