

Eyoyo Scanner

'How to' guide



Pairing the Eyoyo Scanner to the Apollo Tester

1. Start by deleting the Bluetooth favourites from the tester so there is no historic data saved on the tester from a scanner previously paired.

To do this from the tester beginning menu screen press F4, press the digit 8 key button (Memory), press F4 then press the arrow down button to select the Delete Bluetooth Favourites option then press F3 to select then press F4 button (floppy disk icon) a 'Are you sure' message will appear press return button to confirm. An 'All done' message box will appear click the return button to confirm.

2. Press the F5 button to return to main menu screen.
3. With the scanner you get an instruction booklet. Please see page 15. Scan the first QR code (Restore Defaults) with the scanner. The scanner will beep to confirm.

4. The scanner now needs to be put into pairing mode. The Apollo uses the SPP format which can be found on page 18 of the instruction booklet. Scan the QR code at the bottom of the page (Bluetooth SPP Pairing Mode). The scanner will beep to confirm.



Scan the QR code here

5. Conduct a search on the Apollo tester for the scanner. On the menu screen press the digit 3 key button (Connectivity) press F2 (Search Bluetooth) the tester will then search for the scanner. The scanner will show as a name starting EY- to indicate it's picked up the scanner on Bluetooth. The scanner can now be paired to the Apollo.

6. In the Barcode section press the up-arrow key then the right arrow to see the Barcode Scanner Dialog box, press the down arrow key to select the EY- scanner then the left arrow key to select this and press the F4 button (floppy disk icon) to save.
7. Press F1 (House icon) to go to Auto PAT screen. Press F2 (PAT logo). On the top right hand of the screen there will be a cross (x) through the barcode logo. Wait for the scanner to time out. A beep will indicate it has. Now the cross (x) will disappear and the barcode logo is displayed.

Together, we're making our world a safer place.
Every. Single. Day.

T: +44 (0) 191 587 8741 E: sales@seaward.com



SEAWARD
GMC-INSTRUMENTS GROUP

Sleep Time Setting

1. The Eyoyo Scanner uses a battery saving function. This can be set to anything from 30 seconds to 30 minutes or to never turn off at all. The default setting is set to 2 minutes. It can be changed to the user's requirement which you are able to do following instructions on page 28 of the instruction book. Please be mindful if you do have it running for a longer time with no sleep time setting the battery will drain faster on the scanner.
2. The sleep function is enabled every time you move away from the main test screen.
3. For example, if you went into the home screen then selected an option to go into a different screen the scanner will beep to indicate it will go into sleep mode.
4. Whilst it is in this mode when the light is flashing go back to the Auto PAT screen (F1, F1, F2) the scanner will auto connect within a couple of seconds.

Reconnecting the Eyoyo Scanner to the Apollo Tester

1. When a tester is turned off and turned back on again you do not need to go through the whole pairing setup process again.
2. The scanner will be in sleep mode to save battery life. The scanner will show no lights on.
3. Once the Apollo tester is powered up go into Auto PAT screen (F1, F2) the cross (x) is shown through the barcode, press and hold the scanner button for approximately two seconds. The scanner will beep and the barcode is now shown without any cross (x) and you can scan a barcode (This may take up to 10 seconds).



Together, we're making our world a safer place.
Every. Single. Day.

T: +44 (0) 191 587 8741 E: sales@seaward.com



SEAWARD
GMC-INSTRUMENTS GROUP