

How would I PAT test a Class I kettle correctly?

Select the Class I portable/handheld appliance option, and connect the test lead to the element of the kettle. Turn the switch on the kettle to the on position and plug the kettle into the tester. Ensure that your test lead is making good contact with the kettles element, as limescale deposits may result in contact issues, and result in a test failure.

Click here to view our video on testing a Class I kettle

If you require more help, please contact us at https://www.seaward.com/gb/enquiry/.