



SEAWARD
ELECTRICAL SAFETY TESTING
& MEASURING.

My PV 200/210 is displaying an error message “ER” followed by a number?

Normally points to a component failure (usually a relay) that isn't repairable by the user. Send unit back to Seaward for further investigation.

If you require more help, please contact us at
<https://www.seaward.com/cms/enquire/>.