



Why am I receiving an “OPEN” failure when performing an IEC lead test?

This is a 3 part test and is made up of:

Earth Continuity, Insulation Resistance and a Wiring Check.

The wiring check consists of the following tests:

Live open

Neutral open

L/N Short

L/N Reversed

The “Open” failure would indicate that an open circuit has been detected during testing.

If you require more help, please contact us at

<https://www.seaward.com/sitemap/enquiry/>.