



What are the leakage limits for Class I?

The PASS/FAIL limit set on a pre 5th Edition PrimeTest 100 is 0.75mA, therefor the user would determine the servicibility of the item against the value shown.

The 5th Edition version of the PrimeTest 100 (dipicted with the 5th Edition logo on the front of the tester) has a PASS/FAIL limit set at 5mA.

For reference it it may be worth getting a your copy of our Guide to PAT, at the following link:

<http://www.seaward.com/userfiles/pat-testing-guide.php>

If you require more help, please contact us at <https://www.seaward.com/sitemap/enquire/>.