



SEAWARD
ELECTRICAL SAFETY TESTING
& MEASURING.

How to turn the Primetest 50 on/off?

To turn on the PT 50, press and hold both the class 1 and 2 buttons.

If you require more help, please contact us at

<https://www.seaward.com/gb/enquire/>.