


How do I back up my PATGuard 2 database?

The database files holding your results need to be backed up to another directory or disc. The reason for this is that if your PC crashes then your results are not lost. To do this:-

- ^{1.} Right click on 'Start'.
- 2. Left click on 'Explore'.
- ^{3.} This will open the 'Explorer' window.

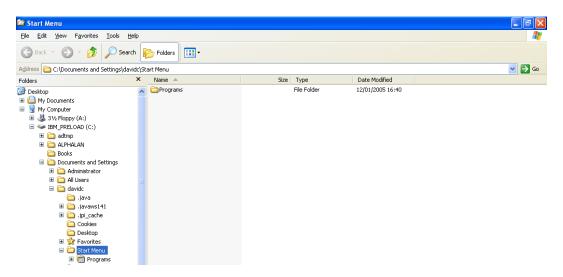

- 4. Under your local hard drive, normally 'C:' drive, go down the list and select the plus (+) symbol to the right of 'Program Files'.
- ^{5.} This will display further folders, select the plus (+) symbol to the right of 'Seaward'.
- 6.

In Seaward click on 'PATGuard 2'.

PATGuard Plus					
<u>E</u> dit <u>Vi</u> ew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp					4
Back 🔹 🕥 - 🍂 🔎 Search 📴 Fr	olders 📰 •				
ress C:\Program Files\Seaward\PATGuard Plus					🗸 🔁 G
	me 🔺	Size	Туре	Date Modified	
	Manager	5400	File Folder	02/02/2005 08:03	1
	Reports		File Folder	31/01/2005 15:43	
	INEU		File Folder	12/08/2004 07:25	
Cominas Applicacions	/iewer		File Folder	24/01/2005 15:47	
u 🛄 L-1650			File Folder	24/01/2005 10:11	
	m32b9.dll	604 KB	Application Extension	10/04/2003 13:10	
a 🛄 Highimit Co wholing wizard	m32cr9.dl	114 KB	Application Extension	04/11/2002 14:38	
0 🛄 10H	m32ct9.dl	1.006 KB	Application Extension	10/04/2003 15:26	
a 🛄 TIKGI	m32dw9.dll	588 KB	Application Extension	10/04/2003 16:48	
a 🛄 Tricemer Explorer	m3219.dll	2.271 KB	Application Extension	10/04/2003 13:26	
u 🔄 lotus	m32l9ex.llx	,	LLX File	10/04/2003 10:53	
- Hossenger	m3219ht.llx		LLX File	04/11/2002 07:21	
- Herosole Hearosyne	m32l9s.dl	174 KB	Application Extension	10/12/2002 11:19	
🖬 🦲 microsore frompage	M32L9XL.DLL	424 KB	Application Extension	05/11/2002 16:19	
	m32l901.lng	327 KB	LNG File	20/03/2003 09:25	
	m32pr9.dl	133 KB	Application Extension	19/12/2002 16:40	
	m32pr9.dll	133 KB 118 KB	Application Extension	04/11/2002 14:25	
🖿 🦲 Moly Gaming Zone	mbt1901	721 KB	Compiled HTML Help file	10/12/2002 11:05	
La Nochooding	mbti901	721 KB 59 KB	Setup Information		
	icom95			09/09/2002 07:39	
U OFINITE DEL VICES		1,201 KB	Application	06/10/2000 13:11	
	emo database	684 KB	Microsoft Access Application	26/10/2004 16:02	
	Manager	1 KB	DAT File	06/01/2005 09:17	
	Manager	68 KB	Application	01/07/2004 20:27	
u 🛄 rugur	Manager	1 KB	Configuration Settings	02/02/2005 08:01	
🗉 🛅 SBApps 📃 🧾		38 KB	DAT File	24/01/2005 10:10	
	runin	4 KB	Configuration Settings	24/01/2005 10:11	
u u boarrai a	runin.lng	9 KB	LNG File	24/01/2005 10:10	
	view9	372 KB	Application	11/07/2002 15:22	
	ndac_typ	7,673 KB	Application	06/10/2000 13:04	
	ATGuard e-Scheduler User M	420 KB	Adobe Acrobat Document	01/07/2004 20:14	
	ATGuard Plus Manual	899 KB	Adobe Acrobat Document	26/10/2004 16:02	
	ATGuardPlus		DAT File	11/01/2005 10:51	
U viewer 🚬 .	ATGuardPlus	356 KB	Application	31/10/2004 11:37	
	ATGUARDPLUS	70 KB	Help File	26/10/2004 16:18	
👝 💴 🔟 🖬 🖻	ATGuardPlus.cnt	1 KB	CNT File	26/10/2004 16:02	

7. In here you will find your database files under the name you gave and identified as 'Microsoft Access Application' files (.mdb), e.g. Demo database.

Microsoft Photo Editor - [untitled1] Sele Edit View Image Effects Tools Window Help						
	200% 💌					
🔤 cm32l9ht.llx	839 KB	LLX File	04/11/200			
🔊 cm32l9s.dll	174 KB	Application Extension	10/12/200			
S CM32L9XL.DLL	424 KB	Application Extension	05/11/200			
📑 🖬 cm32l901.lng	327 KB	LNG File	20/03/200			
💽 cm32pr9.dll	133 KB	Application Extension	19/12/200			
💽 cm32ut9.dll	118 KB	Application Extension	04/11/2002			
🔡 cmbtl901	721 KB	Compiled HTML Help file	10/12/200:			
📑 📴 cmbtl901	59 KB	Setup Information	09/09/200			
🚽 🚰 dcom 95	1,201 KB	Application	06/10/200			
🕘 Demo database	684 KB	Microsoft Access Application	26/10/200 [,]			
🖬 eManager	1 KB	DAT File	06/01/200			
eMan Type: Microsoft Access Ap	68 KB	Application	01/07/200 ⁴			
Bellan Date Modified: 26/10/2004		Configuration Settings	02/02/200			
📕 🗟 irunin Size: 684 KB	38 KB	DAT File	24/01/200			
🧿 irunin	4 KB	Configuration Settings	24/01/200			
🖬 irunin.lng	9 KB	LNG File	24/01/200			
🔍 Ilview9	372 KB	Application	11/07/200;			
🚰 mdac_typ	7,673 KB	Application	06/10/200			
PATGuard e-Scheduler User M	420 KB	Adobe Acrobat Document	01/07/200 <mark>4</mark>			
Right button to complete paste. ESC to cancel. Selection: 0,0:899,741 W,H: 900,742						

- ^{8.} On the database right click and from the drop down menu select 'Copy'.
- 9.

The database file can be 'Pasted' into the new directory on your server or into a directory for burning onto CD by right mouse click in the relevant directory and select "Paste".

Note:

Database files should be backed up on a regular basis and a weekly routine procedure is recommended.

If you require more help, please contact us at https://www.seaward.com/de/enquire/.